

Air Cleaner 50-870



PART NO. 410-10-651-0001 - 03-31-02
Copyright © 2002 Delta Machinery



To learn more about DELTA MACHINERY
visit our website at: www.deltamachinery.com.

For Parts, Service, Warranty or other Assistance,

please call **1-800-223-7278** (In Canada call **1-800-463-3582**).

ESPAÑOL: PÁGINA 11

GENERAL SAFETY RULES

Woodworking can be dangerous if safe and proper operating procedures are not followed. As with all machinery, there are certain hazards involved with the operation of the product. Using the machine with respect and caution will considerably lessen the possibility of personal injury. However, if normal safety precautions are overlooked or ignored, personal injury to the operator may result. Safety equipment such as guards, push sticks, hold-downs, featherboards, goggles, dust masks and hearing protection can reduce your potential for injury. But even the best guard won't make up for poor judgment, carelessness or inattention. Always use common sense and exercise caution in the workshop. If a procedure feels dangerous, don't try it. Figure out an alternative procedure that feels safer. **REMEMBER:** Your personal safety is your responsibility.

This machine was designed for certain applications only. Delta Machinery strongly recommends that this machine not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, **DO NOT** use the machine until you have first contacted Delta to determine if it can or should be performed on the product.




Technical Service Manager
Delta Machinery
4825 Highway 45 North
Jackson, TN 38305
(IN CANADA: 505 SOUTHGATE DRIVE, GUELPH, ONTARIO N1H 6M7)



WARNING: FAILURE TO FOLLOW THESE RULES MAY RESULT IN SERIOUS PERSONAL INJURY.

1. **FOR YOUR OWN SAFETY, READ AND UNDERSTAND THE INSTRUCTION MANUAL BEFORE OPERATING THE UNIT.** Learn the unit's application and limitations as well as the specific hazards peculiar to it.
2. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
3. **DON'T USE IN DANGEROUS ENVIRONMENT.** Don't use this unit in damp or wet locations, or expose it to rain. Keep work area well-lighted.
4. **KEEP CHILDREN AND VISITORS AWAY.** All children and visitors should be kept a safe distance from work area.
5. **DISCONNECT UNIT** before servicing.
6. **CHECK DAMAGED PARTS.** Before further use of the unit, properly repair or replace any part that is damaged.

SAFETY RULES FOR AIR CLEANERS

1.  **DANGER: DO NOT USE THIS UNIT TO FILTER METAL DUST.** Combining wood and metal dust can create an explosion or fire hazard. This unit is intended to filter non-explosive atmospheres only.
2.  **WARNING: DUST GENERATED BY CERTAIN WOODS AND WOOD PRODUCTS CAN BE HAZARDOUS TO YOUR HEALTH.**
3.  **WARNING: DO NOT USE THIS UNIT TO DISSIPATE FUMES OR SMOKE.** This air cleaner is intended for use where only dry airborne dust is present. Its use should be limited to non-explosive, non-metallic atmospheres.
4. **DO NOT OPERATE THIS UNIT UNTIL IT IS COMPLETELY ASSEMBLED AND INSTALLED ACCORDING TO THE INSTRUCTIONS.**
5. **OBTAIN ADVICE FROM YOUR SUPERVISOR, INSTRUCTOR, OR ANOTHER QUALIFIED PERSON** if you are not thoroughly familiar with the operation of this unit.
6. **FOLLOW ALL WIRING CODES** and recommended electrical connections.
7. **DO NOT LIFT THIS UNIT BY THE POWER CORD.** Do not use the power cord as a hanging device.
8. **SECURELY ANCHOR THIS UNIT INTO A SUPPORTING STRUCTURE** when suspending it from the ceiling. Always keep a minimum of 7 feet between the bottom of the unit and the floor surface to allow for sufficient head clearance. Use only chain rated for a minimum of 150 lb. working load to adequately hold the unit. Use steel S-Hooks that are at least 1/4" in diameter to suspend the unit from the ceiling. Lag-type bolts used to suspend the unit from the ceiling must be threaded at least 1-1/2" into supporting structural members.
9. **SUPPORT THIS UNIT OR SECURELY CLAMP IT TO THE WORK SURFACE WHEN IT IS USED IN A PORTABLE APPLICATION** to eliminate potential movement and/or damage from falling.
10. **INSURE THAT THE INTAKE AND EXHAUST AREAS ARE CLEAR PRIOR TO STARTING THE UNIT.**
11. **KEEP ARMS, HANDS, AND FINGERS AWAY FROM THE FAN.** Avoid all exposure to rotating parts.
12. **DO NOT OPERATE THIS UNIT WITHOUT THE FILTERS IN PLACE.**
13. **DO NOT ATTEMPT TO REMOVE OR REPLACE THE FILTER(S) WHILE THE UNIT IS RUNNING.** Make certain that the unit is disconnected from the power source.
14. **MAINTAIN THE UNIT IN TOP CONDITION.** Keep filters clean for optimum performance. Follow all instructions for changing and cleaning filters.
15. **STORE THIS UNIT IN A LOCATION** that eliminates the potential of damage to the power cord. Safely store power cord on the unit to eliminate tripping hazards.
16. **TURN THE UNIT "OFF" AND DISCONNECT IT FROM THE POWER SOURCE** before installing or removing accessories, or when making repairs.

READ AND SAVE THESE INSTRUCTIONS.

Refer to them often
and use them to instruct others.

INTRODUCTION

Model 50-870 Delta Air Cleaner is specifically designed to quietly circulate and filter non-metallic dust which is generated throughout the work area. The Air Cleaner is furnished with two filters: a disposable outer filter which filters out larger particles five microns in size; and the secondary filter will capture 91% of dust particles of one micron in size (one micron = one millionth of a meter). Because breathing microscopic particles can be a potential health hazard, filtering microscopic dust particles offers a cleaner and safer environment. This Air Cleaner will filter the air in a room measuring 20' x 20' x 8' either 26, 30, or 35 times an hour, depending on your setting. If desired, multiple units can be used to filter larger areas. The Air Cleaner is relatively maintenance free. An occasional cleaning and/or replacement of filters is the only required maintenance.

UNPACKING

The Air Cleaner is shipped complete in one shipping container. Carefully unpack the Air Cleaner and all loose items from the shipping container. **WARNING: DO NOT LIFT THE AIR CLEANER BY POWER CORD.** Fig. 2A illustrates the contents of the container.

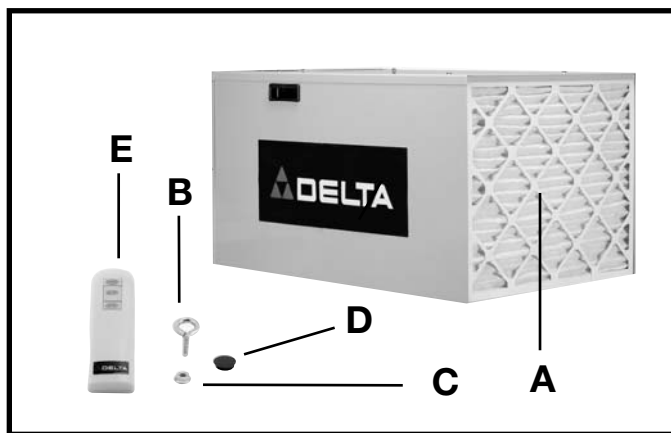


Fig. 2A

- A - Air cleaner
- B - Four 1" eye-bolts
- C - Four 1/4-20 flange nuts
- D - Four rubber feet
- E - Remote Control Unit
Batteries not included)
Bag with twelve #8 screws
(Not shown)

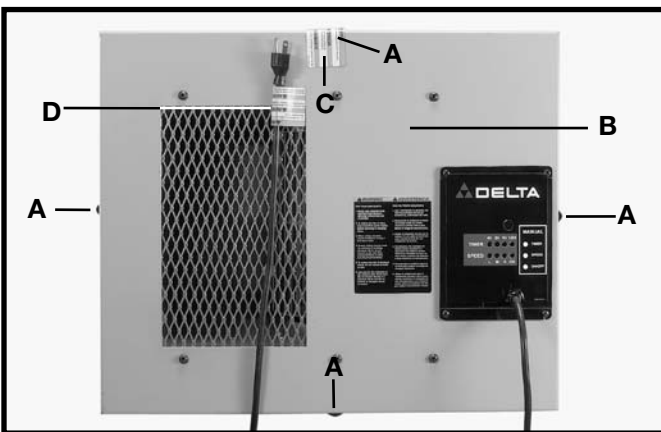


Fig. 2B

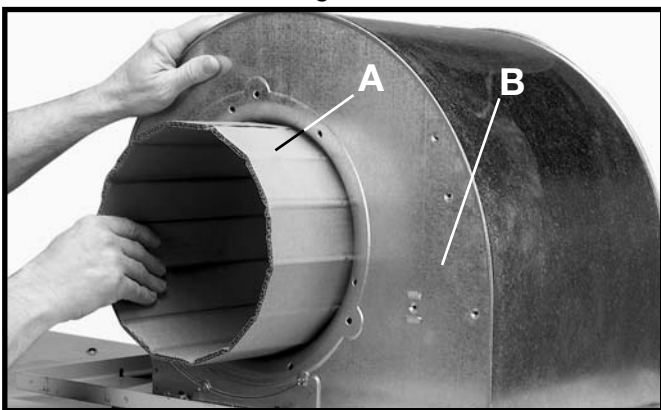


Fig. 2C

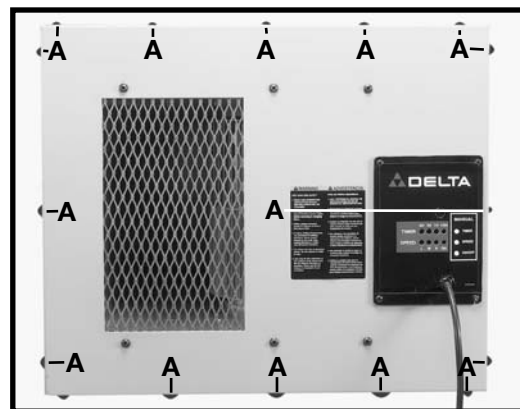


Fig. 2D



WARNING: Do not plug unit into power source prior to performing the following instructions:

1. Remove the four screws (A) Fig. 2B, one on each side of the rear panel (B).
2. Remove the rear panel (B) Fig. 2B with the blower housing attached.
3. Remove the cardboard protector (A) from the blower housing (B) Fig. 2C.
4. Replace the rear panel/blower housing.
5. Secure the back panel to the cabinet with the 4 original screws plus 12 additional #8 pan head screws (supplied) in the holes provided (A) Fig. 2D.
6. Once these steps have been taken, remove and discard the warning labels that were attached to both the rear panel/cabinet (C) Fig. 2B and the end of the power cord (D).

ASSEMBLY INSTRUCTIONS

Determine whether the Air Cleaner will be used on the floor, on a bench, or hanging from overhead. If the Air Cleaner will be used as a mobile unit, proceed to **“USING THE AIR CLEANER ON A BENCH OR FLOOR SURFACE”** section. If ceiling mounting is desired, proceed to section **“MOUNTING THE AIR CLEANER TO A CEILING OR OVERHEAD SUPPORT.”**

IMPORTANT: When determining where to mount the air cleaner, always select a location where the air flow is unrestricted. Do not locate the unit in a corner or near any heating or cooling vents.

USING THE AIR CLEANER ON A BENCH OR FLOOR SURFACE

1. Locate four (4) self-adhesive rubber feet (A) Fig. 3 supplied with the unit. Carefully place the air cleaner on a firm supporting surface with access to the bottom of the cabinet (Fig. 3). Apply a self-adhesive rubber foot (A) Fig. 3 to the bottom at each corner of the air cleaner cabinet. The rubber feet will help eliminate vibration and will prevent the possibility of the air cleaner “walking” across the work or floor surface.

For operator safety, clamp the unit to a work bench or position it securely on sawhorses.

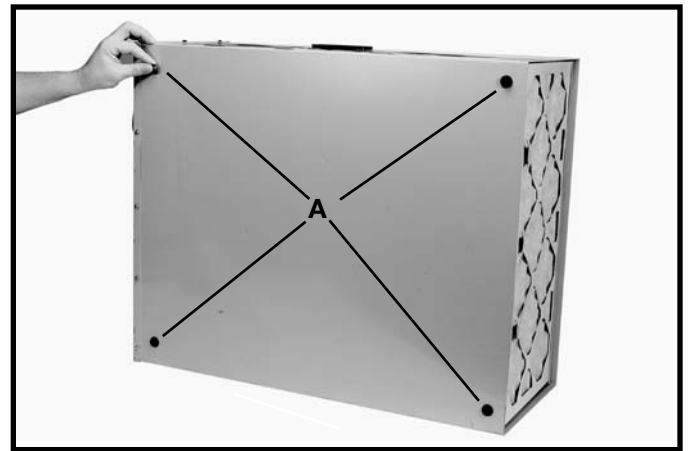


Fig. 3

2. The air cleaner has convenient lifting handles located on both sides of the cabinet (A) Fig. 4. To avoid damage to the air filters, carry the air cleaner with the filters positioned away from your body. **CAUTION: This unit weighs 85 pounds.**

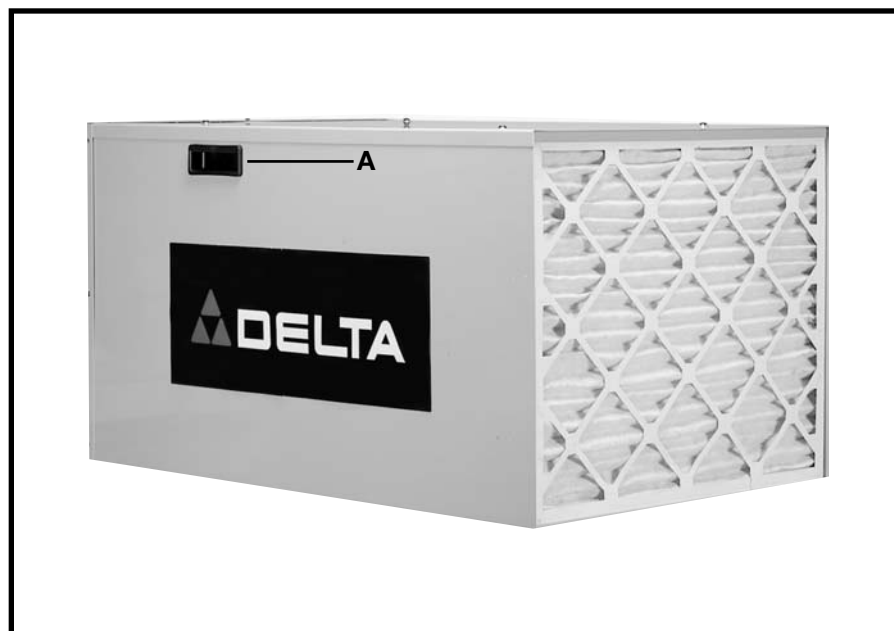


Fig.4

MOUNTING THE AIR CLEANER TO THE CEILING OR OVERHEAD SUPPORT

⚠ WARNING: This unit weighs 85 pounds. When mounting overhead, make certain that the unit is securely fastened and supported.

1. Locate the four 1" eye-bolts, and the four 1/4-20 flange nuts supplied with the unit.
2. Use a 5/32" Allen wrench to remove the four screws (C) Fig. 5 from the top of the air cleaner (D).
3. Thread one flange nut on the eyebolt until approximately 3/4 of the bolt is exposed.
4. Thread an eye-bolt into each of the four holes where screws (C) were removed in **STEP 2**.
5. Fig. 6 illustrates the four eye bolts attached to the top of the air cleaner. **NOTE:** Be certain the flange nuts are tightened against the surface of the air cleaner, and that the eyebolts extend an equal distance above the top of the air cleaner.

When suspending the air cleaner from the ceiling or other overhead support, use steel s-hooks that are a minimum of 1/4". **NOTE:** Thread all lag hooks at least 1-1/2" into the supporting structural members.

When suspending the air cleaner from the ceiling or other overhead support, be certain the supporting hardware (not supplied) is securely anchored.

⚠ WARNING: Never secure the air cleaner hardware to drywall, drop ceiling tile/frame, or other non-structural members.

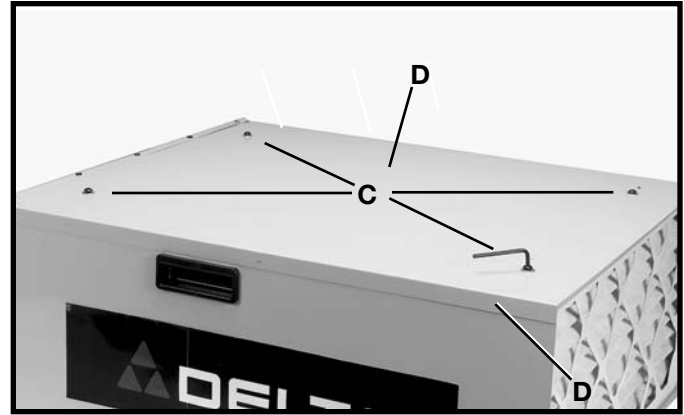


Fig. 5



Fig. 6

⚠ WARNING: Keep a minimum of seven feet between bottom of air cleaner and the floor surface.

DO NOT use rope, cable, or power cord to suspend the unit from the ceiling. Use a chain rated for a minimum of a 150 lb. working load. **IMPORTANT:** When determining a location to mount the unit, the air cleaner will operate more efficiently when the air flow is unrestricted. Do not locate the unit in a corner or near any heating or cooling vents.

CONNECTING MACHINE TO POWER SOURCE

POWER CONNECTIONS

A separate electrical circuit should be used for your tools. This circuit should not be less than #12 wire and should be protected with a 20 Amp time lag fuse. If an extension cord is used, use only 3-wire extension cords which have 3-prong grounding type plugs and 3-hole receptacles which accept the tool's plug. Before connecting the motor to the power line, make sure the switch is in the "OFF" position and be sure that the electric current is of the same characteristics as indicated on the tool. All line connections should make good contact. Running on low voltage will damage the motor.

MOTOR SPECIFICATIONS

This machine is wired for 120 volt, 60 HZ alternating current. The no-load speed of the motor is 1075 RPM, and the full-load amp is 7.9.

GROUNDING INSTRUCTIONS



WARNING: THIS TOOL MUST BE GROUNDED WHILE IN USE TO PROTECT THE OPERATOR FROM ELECTRIC SHOCK.

1. All grounded, cord-connected tools:

In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided - if it will not fit the outlet, have a proper outlet installed by a qualified electrician. Improper connection of the equipment-grounding conductor can result in risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.

Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded.

Use only 3-wire extension cords that have 3-prong grounding type plugs and 3-hole receptacles that accept the tool's plug, as shown in Fig. 7.

Repair or replace damaged or worn cord immediately.

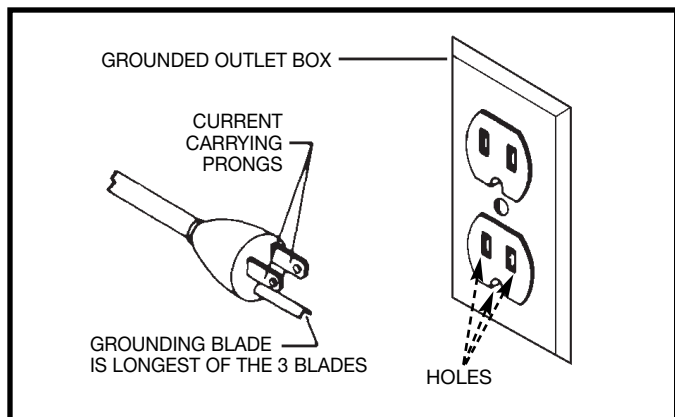


Fig. 7

2. Grounded, cord-connected tools intended for use on a supply circuit having a nominal rating less than 150 volts:

This tool is intended for use on a normal 120-volt circuit and has a grounded plug that looks like the plug illustrated in Fig. 7.

If a properly grounded outlet is not available, a temporary adapter, shown in Fig. 8, may be used for connecting the 3-prong grounding type plug to a 2-hole receptacle. The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place with a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electric Code.



WARNING: IN ALL CASES, MAKE CERTAIN THE RECEPTACLE IN QUESTION IS PROPERLY GROUNDED. IF YOU ARE NOT SURE HAVE A QUALIFIED ELECTRICIAN CHECK THE RECEPTACLE.

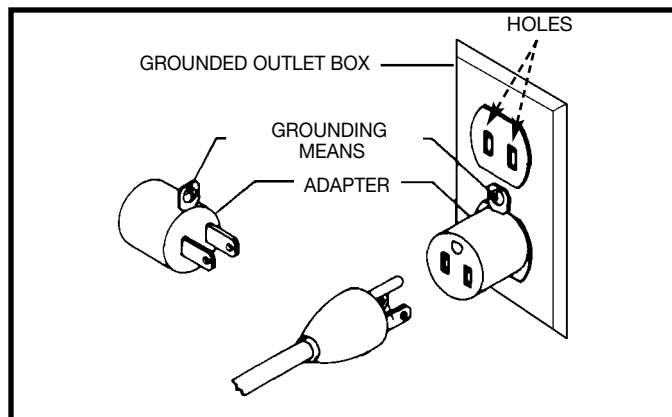


Fig. 8

EXTENSION CORDS

Use proper extension cords. Make sure your extension cord is in good condition and is a 3-wire extension cord which has a 3-prong grounding type plug and a 3-hole receptacle which will accept the tool's plug. When using an extension cord, be sure to use one heavy enough to carry the current of the saw. An undersized cord will cause a drop in line voltage, resulting in loss of power and overheating. Fig. 9 shows the correct gauge to use depending on the cord length. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

MINIMUM GAUGE EXTENSION CORD			
RECOMMENDED SIZES FOR USE WITH STATIONARY ELECTRIC TOOLS			
Ampere Rating	Volts	Total Length of Cord in Feet	Gauge of Extension Cord
0-6	120	up to 25	18 AWG
0-6	120	25-50	16 AWG
0-6	120	50-100	16 AWG
0-6	120	100-150	14 AWG
6-10	120	up to 25	18 AWG
6-10	120	25-50	16 AWG
6-10	120	50-100	14 AWG
6-10	120	100-150	12 AWG
10-12	120	up to 25	16 AWG
10-12	120	25-50	16 AWG
10-12	120	50-100	14 AWG
10-12	120	100-150	12 AWG
12-16	120	up to 25	14 AWG
12-16	120	25-50	12 AWG
12-16	120	GREATER THAN 50 FEET NOT RECOMMENDED	

Fig. 9

USING THE REMOTE CONTROL

WARNING: To reduce the risk of fire or electric shock, do not use this unit with any solid-state speed control device. The remote control provided with this unit is not considered a solid-state device.

The Air Cleaner is equipped with a REMOTE CONTROL UNIT (Fig.10.A) **NOTE:** The remote requires two AAA batteries (not supplied). Batteries should be installed in the back cover.

Notice that the remote control has three control buttons (Fig. 10A): TIME (A), ON/OFF (B), and SPEED (C). These buttons correspond to the LED sensor panel on the rear of the machine (Fig. 10B). **NOTE:** When the machine is connected to the power source, a green light (E) will be activated on the panel.

To activate the blower unit, press the "ON/OFF" button (B) Fig. 10A. The machine will begin in the default speed of low or "L" on the sensor panel. Press the SPEED button once, and the machine will run at the high (or "H") level. Press the SPEED button again and the machine will run at the medium speed (or "M"). Press the SPEED button a third time and the machine will return to low speed mode.

To turn the machine off, press the "ON/OFF" button (B) Fig. 10A.

The 50-870 Dust Collector provides a timer that can be set by remote control. (A) Fig. 10A.

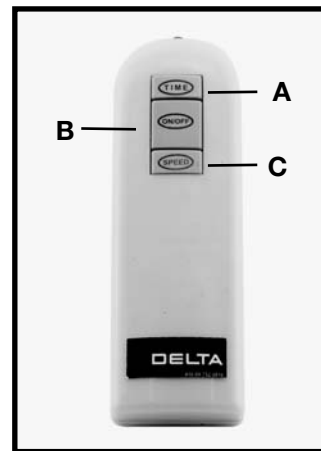


Fig. 10A

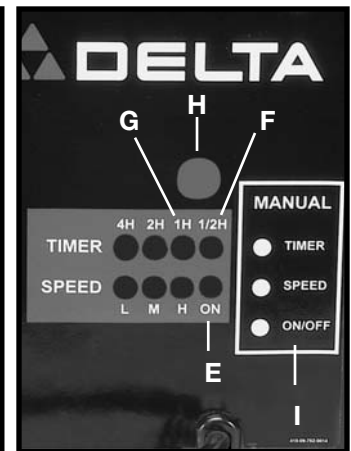


Fig. 10B

When the TIME button (A) Fig. 10A is pressed on the remote control, the machine will run for 1/2 hour. (An LED light will show up on the sensor panel (F) Fig. 10B). Pressing the TIME button again will set the machine to run for one hour. Notice that the light on the sensor panel has now moved to the 1H location (G) Fig. 10B. When the TIME button is pressed a third time, the machine will run for 90 minutes. At this point, two lights will appear - one under the 1H location (G) and one under the 1/2H location (F) indicating an hour and a half. Continue this process for up to 7 1/2 hours of run time.

All of these actions can be manually controlled by using the buttons on the sensor panel (I) Fig. 10B.

OPERATIONS

NOTE: The air cleaner may produce a slight odor for the first few hours of operation due to the protective coating that is applied to internal components. This odor will dissipate and should be disregarded. **IMPORTANT: Never operate the air cleaner without air filters in place.**

The Delta 50-870 air cleaner can be used in

- bench-top sanding applications.
- circular sawing applications.
- dry wall applications.
- shop cleaning applications.
- floor sanding applications.
- any application where non-metallic dust is a factor.

MAINTENANCE

CHANGING AND CLEANING FILTERS

1. To remove the outer first stage filter (A) Fig. 11, lift and pull out the bottom of the filter.
2. Remove inner bag filter (B) Fig. 12 in the same manner.
3. The first stage filter can be replaced (Delta Catalog #50-822) or cleaned depending on its condition. Clean this filter in one of two methods: use a shop-vac to remove the dust, or use compressed air (30 psi - maximum) to blow the dust out of the filter.



WARNING: Compressed air can be dangerous. For operator safety, do not exceed an air pressure of 30 psi. Do not point the air nozzle toward yourself or anyone else. Always wear safety glasses and a dust mask when using compressed air.

4. The inner bag filter is disposable and must be replaced (Delta catalog #50-823). **DO NOT** try to clean it.

5. Reinstall the filters. **NOTE:** To make installation of the filter easier, place the top of the filter inside the cabinet first. Push backward until the bottom of the filter is in place. Then pull the top of the filter into place. **NOTE: The air flow arrow on the outer filter must point inward toward the rear of the air cleaner. Location of the air flow arrow is shown at fig. 13.**

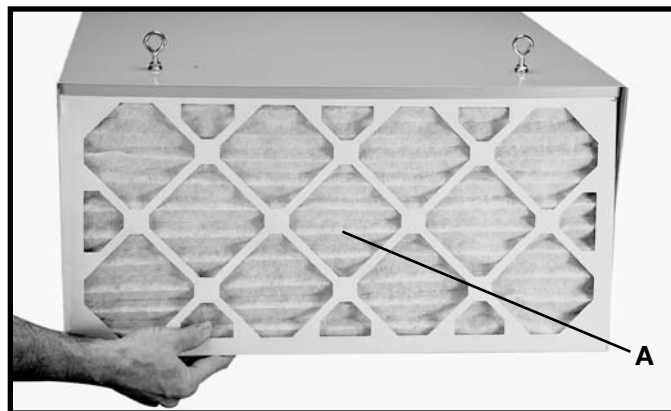


Fig. 11

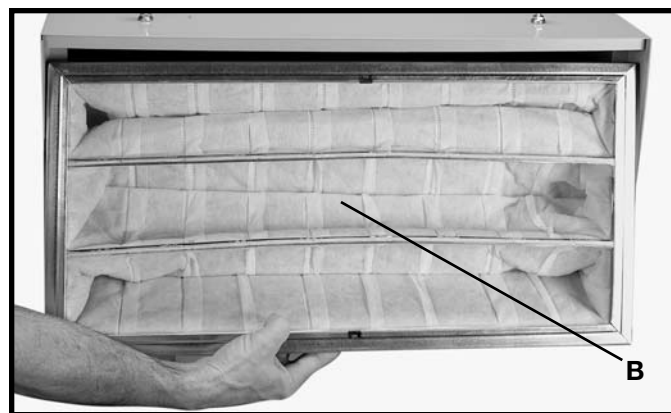



Fig. 12



Fig. 13

ACCESSORIES

A complete line of accessories is available from your Delta Supplier, Porter-Cable • Delta Factory Service Centers, and Delta Authorized Service Stations. Please visit our Web Site www.deltamachinery.com for a catalog or for the name of your nearest supplier.

 **WARNING:** Since accessories, other than those offered by Delta, have not been tested with this product, use of such accessories could be hazardous. For safest operation, only Delta recommended accessories should be used with this product.



PARTS, SERVICE OR WARRANTY ASSISTANCE

All Delta Machines and accessories are manufactured to high quality standards and are serviced by a network of Porter-Cable • Delta Factory Service Centers and Delta Authorized Service Stations. To obtain additional information regarding your Delta quality product or to obtain parts, service, warranty assistance, or the location of the nearest service outlet, please call 1-800-223-7278 (In Canada call 1-800-463-3582).



Delta Building Trades and Home Shop Machinery Two Year Limited Warranty

Delta will repair or replace, at its expense and at its option, any Delta machine, machine part, or machine accessory which in normal use has proven to be defective in workmanship or material, provided that the customer returns the product prepaid to a Delta factory service center or authorized service station with proof of purchase of the product within two years and provides Delta with reasonable opportunity to verify the alleged defect by inspection. Delta may require that electric motors be returned prepaid to a motor manufacturer's authorized station for inspection and repair or replacement. Delta will not be responsible for any asserted defect which has resulted from normal wear, misuse, abuse or repair or alteration made or specifically authorized by anyone other than an authorized Delta Service facility or representative. Under no circumstances will Delta be liable for incidental or consequential damages resulting from defective products. This warranty is Delta's sole warranty and sets forth the customer's exclusive remedy, with respect to defective products; all other warranties, express or implied, whether of merchantability, fitness for purpose, or otherwise, are expressly disclaimed by Delta.

Printed in U.S.A.

PORTER-CABLE • DELTA SERVICE CENTERS (CENTROS DE SERVICIO DE PORTER-CABLE • DELTA)

Parts and Repair Service for Porter-Cable/Delta Power Tools are Available at These Locations
(Obtenga Refaccion de Partes o Servicio para su Herramienta en los Siguietes Centros de Porter-Cable•Delta)

ARIZONA

Tempe 85282 (Phoenix)
2400 West Southern Avenue
Suite 105
Phone: (602) 437-1200
Fax: (602) 437-2200

CALIFORNIA

Ontario 91761 (Los Angeles)
3949A East Guasti Road
Phone: (909) 390-5555
Fax: (909) 390-5554
San Leandro 94577 (Oakland)
3039 Teagarden Street
Phone: (510) 357-9762
Fax: (510) 357-7939

FLORIDA

Davie 33314 (Miami)
4343 South State Rd. 7 (441)
Unit #107
Phone: (954) 321-6635
Fax: (954) 321-6638
Tampa 33609
4538 W. Kennedy Boulevard
Phone: (813) 877-9585
Fax: (813) 289-7948

GEORGIA

Forest Park 30297 (Atlanta)
5442 Frontage Road,
Suite 112
Phone: (404) 608-0006
Fax: (404) 608-1123

ILLINOIS

Addison 60101 (Chicago)
311 Laura Drive
Phone: (630) 628-6100
Fax: (630) 628-0023
Woodridge 60517 (Chicago)
2033 West 75th Street
Phone: (630) 910-9200
Fax: (630) 910-0360

MARYLAND

Elkridge 21075 (Baltimore)
7397-102 Washington Blvd.
Phone: (410) 799-9394
Fax: (410) 799-9398

MASSACHUSETTS

Braintree 02185 (Boston)
719 Granite Street
Phone: (781) 848-9810
Fax: (781) 848-6759
Franklin 02038 (Boston)
Franklin Industrial Park
101E Constitution Blvd.
Phone: (508) 520-8802
Fax: (508) 528-8089

MICHIGAN

Madison Heights 48071 (Detroit)
30475 Stephenson Highway
Phone: (248) 597-5000
Fax: (248) 597-5004

MINNESOTA

Minneapolis 55429
4315 68th Avenue North
Phone: (763) 561-9080
Fax: (763) 561-0653

MISSOURI

North Kansas City 64116
1141 Swift Avenue
P.O. Box 12393
Phone: (816) 221-2070
Fax: (816) 221-2897
St. Louis 63119
7574 Watson Road
Phone: (314) 968-8950
Fax: (314) 968-2790

NEW YORK

Flushing 11365-1595 (N.Y.C.)
175-25 Horace Harding Expwy.
Phone: (718) 225-2040
Fax: (718) 423-9619

NORTH CAROLINA

Charlotte 28270
9129 Monroe Road, Suite 115
Phone: (704) 841-1176
Fax: (704) 708-4625

OHIO

Columbus 43214
4560 Indianola Avenue
Phone: (614) 263-0929
Fax: (614) 263-1238

Cleveland 44125
8001 Sweet Valley Drive
Unit #19
Phone: (216) 447-9030
Fax: (216) 447-3097

OREGON

Portland 97230
4916 NE 122 nd Ave.
Phone: (503) 252-0107
Fax: (503) 252-2123

PENNSYLVANIA

Willow Grove 19090
520 North York Road
Phone: (215) 658-1430
Fax: (215) 658-1433

TEXAS

Carrollton 75006 (Dallas)
1300 Interstate 35 N, Suite 112
Phone: (972) 446-2996
Fax: (972) 446-8157
Houston 77055
West 10 Business Center
1008 Wirt Road, Suite 120
Phone: (713) 682-0334
Fax: (713) 682-4867

WASHINGTON

Renton 98055 (Seattle)
268 Southwest 43rd Street
Phone: (425) 251-6680
Fax: (425) 251-9337

Authorized Service Stations are located in many large cities. Telephone **800-487-8665** or **731-541-6042** for assistance locating one. Parts and accessories for Porter-Cable •Delta products should be obtained by contacting any Porter-Cable•Delta Distributor, Authorized Service Center, or Porter-Cable•Delta Factory Service Center. If you do not have access to any of these, call **888-848-5175** and you will be directed to the nearest Porter-Cable•Delta Factory Service Center. Las Estaciones de Servicio Autorizadas están ubicadas en muchas grandes ciudades. Llame al **800-487-8665** ó al **731-541-6042** para obtener asistencia a fin de localizar una. Las piezas y los accesorios para los productos Porter-Cable•Delta deben obtenerse poniéndose en contacto con cualquier distribuidor Porter-Cable•Delta, Centro de Servicio Autorizado o Centro de Servicio de Fábrica Porter-Cable•Delta. Si no tiene acceso a ninguna de estas opciones, llame al **888-848-5175** y le dirigirán al Centro de Servicio de Fábrica Porter-Cable•Delta más cercano.

CANADIAN PORTER-CABLE • DELTA SERVICE CENTERS

ALBERTA

Bay 6, 2520-23rd St. N.E.
Calgary, Alberta
T2E 8L2
Phone: (403) 735-6166
Fax: (403) 735-6144

BRITISH COLUMBIA

8520 Baxter Place
Burnaby, B.C.
V5A 4T8
Phone: (604) 420-0102
Fax: (604) 420-3522

MANITOBA

1699 Dublin Avenue
Winnipeg, Manitoba
R3H 0H2
Phone: (204) 633-9259
Fax: (204) 632-1976

ONTARIO

505 Southgate Drive
Guelph, Ontario
N1H 6M7
Phone: (519) 836-2840
Fax: (519) 767-4131

QUÉBEC

1515 ave.
St-Jean Baptiste,
Québec, Québec
G2E 5E2
Phone: (418) 877-7112
Fax: (418) 877-7123

1447, Begin
St-Laurent, (Montréal),
Québec
H4R 1V8
Phone: (514) 336-8772
Fax: (514) 336-3505

The following are trademarks of PORTER-CABLE•DELTA (Las siguientes son marcas registradas de PORTER-CABLE S.A.): BAMMER®, INNOVATION THAT WORKS®, JETSTREAM®, LASERLOC®, OMNIJIG®, POCKET CUTTER®, PORTA-BAND®, PORTA-PLANE®, PORTER-CABLE®, QUICKSAND®, SANDTRAP®, SAW BOSS®, SPEED-BLOC®, SPEEDMATIC®, SPEEDTRONIC®, STAIR-EASE®, THE PROFESSIONAL EDGE®, THE PROFESSIONAL SELECT®, TIGER CUB®, TIGER SAW®, TORQBUSTER®, WHISPER SERIES®, DURATRONIC™, FLEX™, FRAME SAW™, MICRO-SET™, MORTEN™, NETWORK™, RIPTIDE™, TRU-MATCH™, WOODWORKER'S CHOICE™.

Trademarks noted with ® are registered in the United States Patent and Trademark Office and may also be registered in other countries. Las Marcas Registradas con el signo de ® son registradas por la Oficina de Registros y Patentes de los Estados Unidos y también pueden estar registradas en otros países.